




## Nicor Hydroconn® AMR Series III Inline Connector Mating Instructions

**Step 1:** Align the inline connector with arrows pointing toward each other.

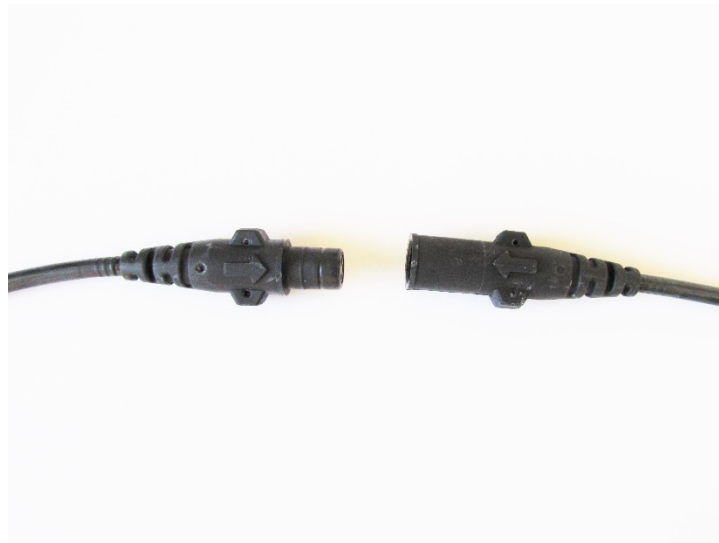


**Step 2:** Press firmly together making sure arrows still line up. DO NOT TWIST.



**Step 3:** Lay connector into one half of security seal and make sure it fits snug.



**Step 4:** Close other half of security seal and snap pins thru the holes.

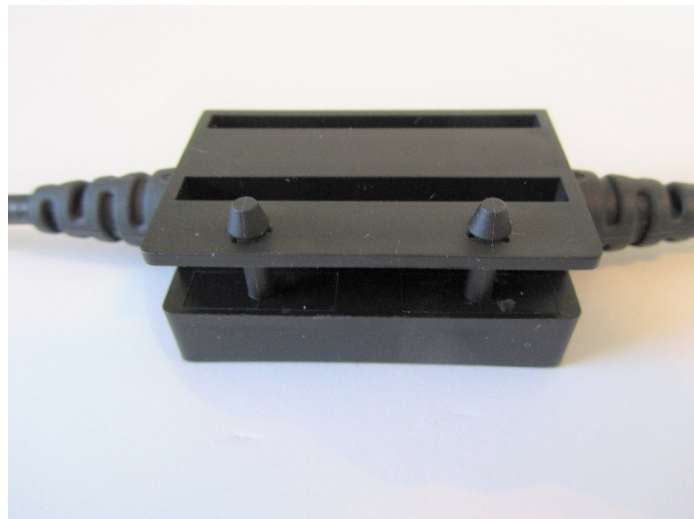

**NOTE:** This seal can only be used once. If opened pins will break.